

# AURORA

## 36Gx2 SQUARE GALVANIZED PLATE STACK




GRUB-SCREWS ARE IN PLACE TO PROTECT THE THREADED HOLES ON BASES DURING SHIPPING AND STORAGE. THEY MUST BE REMOVED AND DISCARDED BEFORE THE INSTALLATION OF ANY UMBRELLA.

Your Aurora Cantilever comes with the Spigot already inserted in the mast of your umbrella. Once you have properly stacked your G-Plate, remove the Spigot from your umbrella and you can begin to mount your Spigot to the plate stack, and then the umbrella. (see **FIGURE 4**).

- Once your 36G-Plate (“Bottom Plate”) is unpacked, move into the desired location you will be mounting the umbrella. Once in place immediately remove and discard ALL Grub-Screws from the G-Plate (**FIGURE 1**).
- NOTE:** If you are installing Caster Wheels (+W), do-so before stacking your “Top Plates” (If you choose to use wheels after you’ve created a stack, you will have to remove the top plate to install the wheels). Once your wheels are installed, be sure to lock them in place while completing your stack.
- Locate your pair of Guide Pins and hand tighten into a pair of parallel threaded holes into the 36G-SQ (“Bottom Plate”) you have set into place (**FIGURE 1-A**) .
- Begin to unpack your 36G-SQ “Top Plate”. Using a half of the white packing foam, place on the edge of the bottom plate already in place and set down your plate (**FIGURE 2A**). This will help prevent any pinching of your fingers or injury.
- TWO PERSON JOB:** Lift your second 36G-SQ “Top Plates” (**FIGURE 2**), and slowly stack the plate over the Guide Pins. Repeat for your third plate to complete the stack.
- Once both plates are stacked, and over the Guide Pins, retrieve and remove the Spigot from the mast of your Aurora umbrella. Place the Spigot over the Guide Pins (**FIGURE 3**) then remove the Guide Pins and you will have a clear visible path to the bottom plate’s threaded holes.
- With your Spigot in place on G-Plate stack lined up to the outer four bolts, use the supplied hardware that is packed with your umbrella and bolt the Spigot onto the G-Plate stack threading down into the bottom plate (**FIGURE 4**). Once your Spigot is secure to the G-Plate stack, begin to lift the Aurora onto the Spigot until you hear an audible “click” indicating your umbrella is secure.

### +W (WHEEL OPTION HARDWARE)

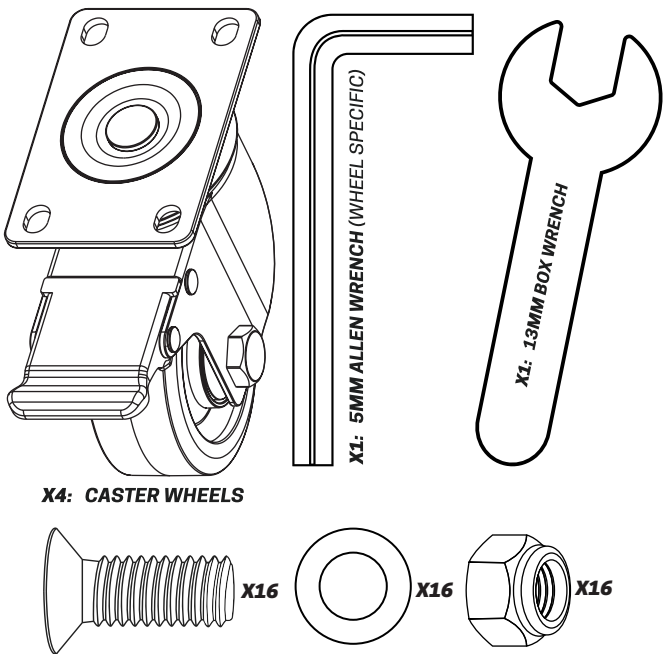

### INCLUDED G-PLATE DOUBLE STACK SPECIFIC MOUNTING HARDWARE

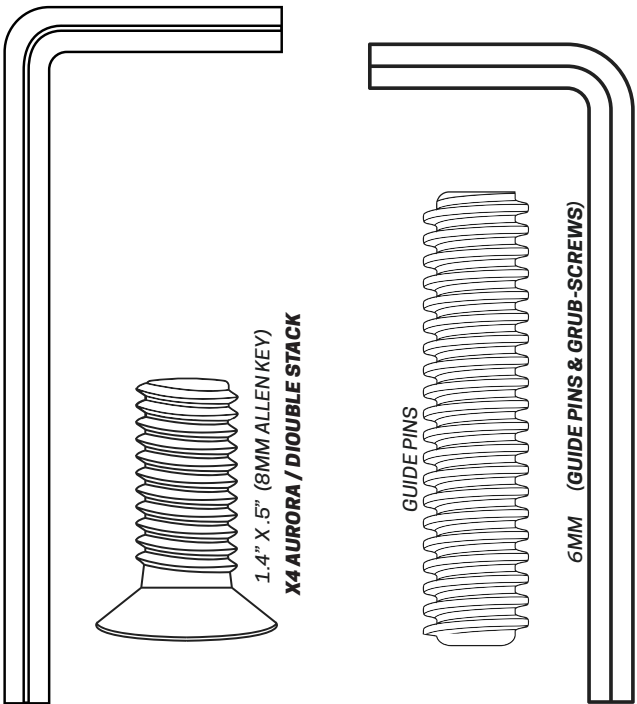


FIGURE 1 - (BOTTOM PLATE / “THREADED HOLES”)

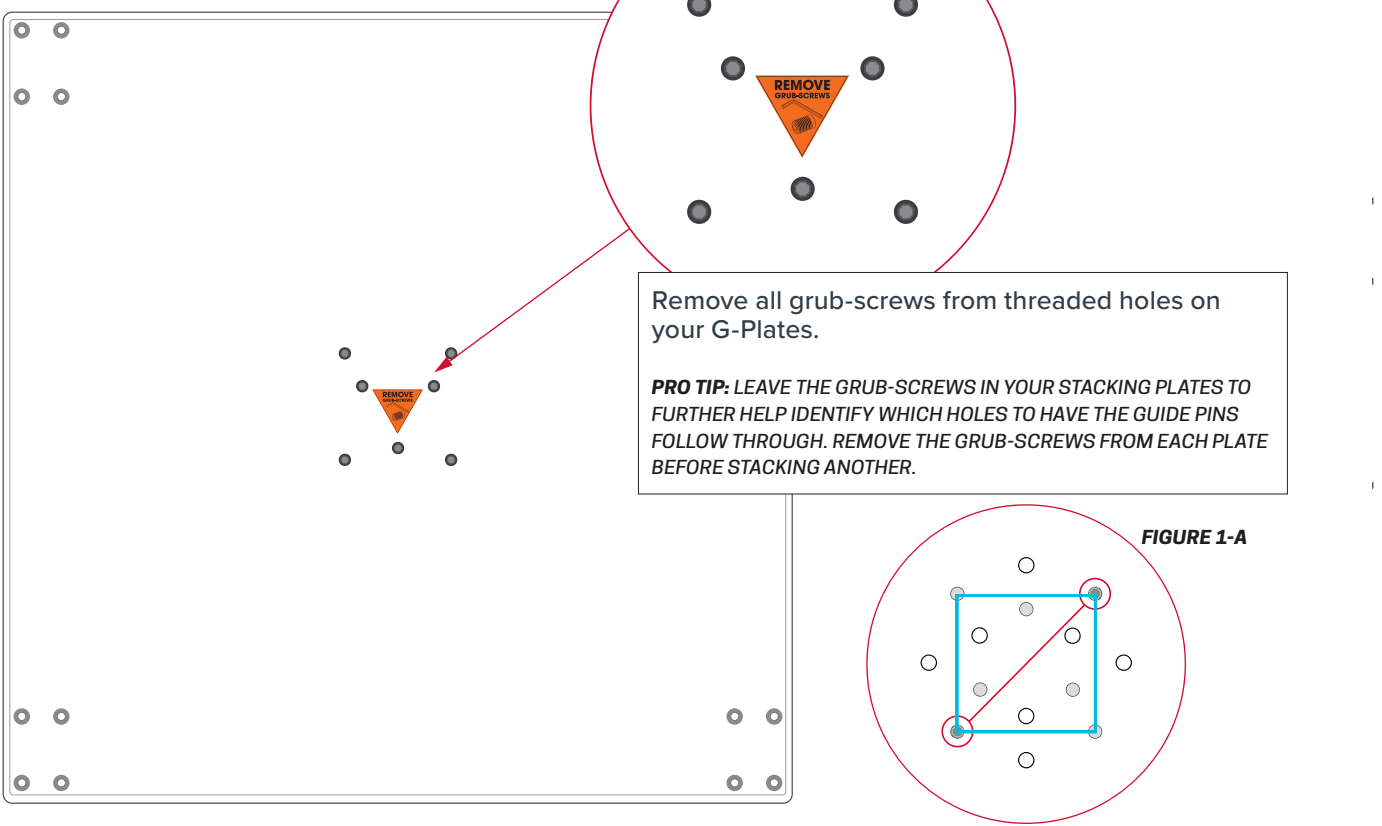


FIGURE 2 - (STACKING PLATES / “TOP PLATE”)


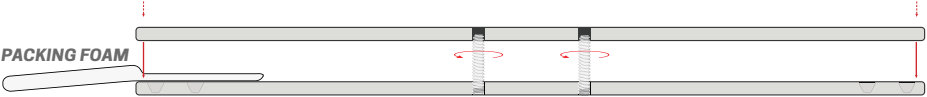


FIGURE 2-A - (INSTALLING CASTER WHEELS)

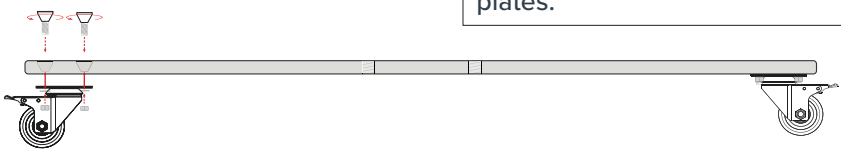

If installing Caster Wheels, you must install to your bottom 36G plate before stacking other plates. Be sure to lock your wheels before stacking other plates.

FIGURE 3

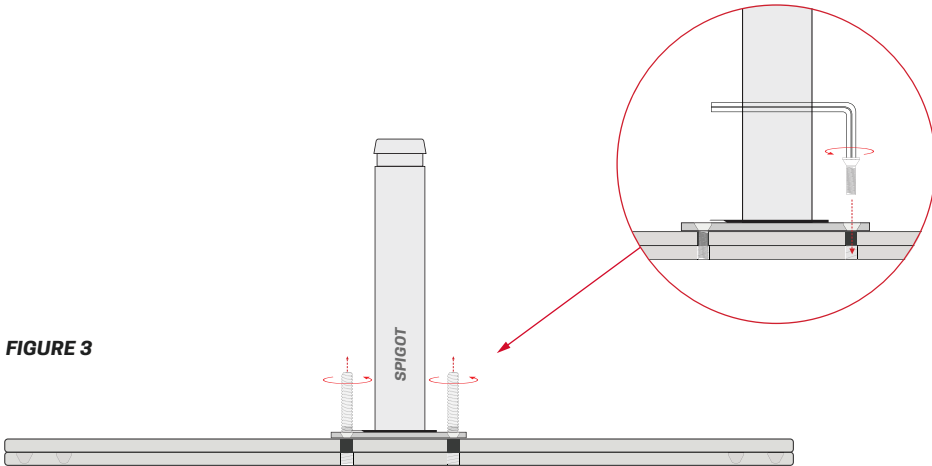


FIGURE 4

After Guide Pins are removed, thread the supplied hardware to the bottom plate.