



**GRUB-SCREWS ARE IN PLACE TO PROTECT THE THREADED HOLES ON BASES DURING SHIPPING AND STORAGE. THEY MUST BE REMOVED AND DISCARDED BEFORE THE INSTALLATION OF ANY UMBRELLA.**

Your Eclipse® comes with the Spigot (35) already inserted in the mast of your umbrella. Once you have properly leveled your base (If adjustable feet used) or have installed the caster wheels and have them in the locked position, you can begin to mount your Spigot (35) and then umbrella. (see **FIGURE 1**).

**IMPORTANT:** Your umbrella mounting hardware, wheels (hardware) and adjustable feet are packed within the base. Remove the lid to locate and retrieve your hardware and accessories. Proceed to remove the grub-screws from the mounting plate on the ECU-480.

### TOOLS & MATERIALS NEEDED

- A trusted level (if adjustable feet are chosen)
- Twelve (12) Concrete Pavers (recommended weight 35 lbs. +) 2" x 16" - Most pavers have a tolerance and may be smaller. The weight is most important. Minimum weight per quadrant 100-110lbs.
- 1/2" Crescent or box wrench

1. Once you have unpacked your ECU-480, remove the lid, locate and retrieve your mounting hardware, wheels (hardware) and adjustable feet. Choose which you would like to use and install before weighing down with pavers and/or weights.
2. After you have installed the wheels or feet, pavers should be placed in the base corner towards the center first (**FIGURE 1**), under the mounting plate. Repeat in each quadrant until the base is full with Twelve (12) appropriately weighted pavers.
3. After your base is sufficiently weighed down, place the lid back onto the base (**FIGURE 2**), lock your wheels if installed, and retrieve your Spigot (35) from the mast of the Eclipse®
4. Mount your Spigot (35) to the ECU-480 with the included mounting hardware on the outer threaded pattern (**FIGURE 3A**).
5. With your Spigot in place and on 480 Mounting Plate, use the supplied hardware that is packed with your umbrella and bolt the Spigot onto the plate threading down to only the plate (**FIGURE 3**). Once your Spigot is threaded down, begin to lift the Eclipse® onto the Spigot until you hear an audible "click" indicating your umbrella is secure.

### INCLUDED ECU-480 SPECIFIC MOUNTING HARDWARE

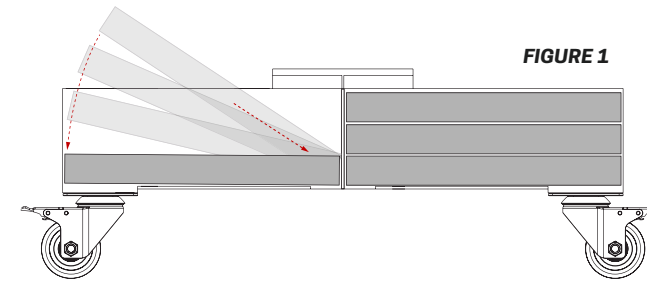
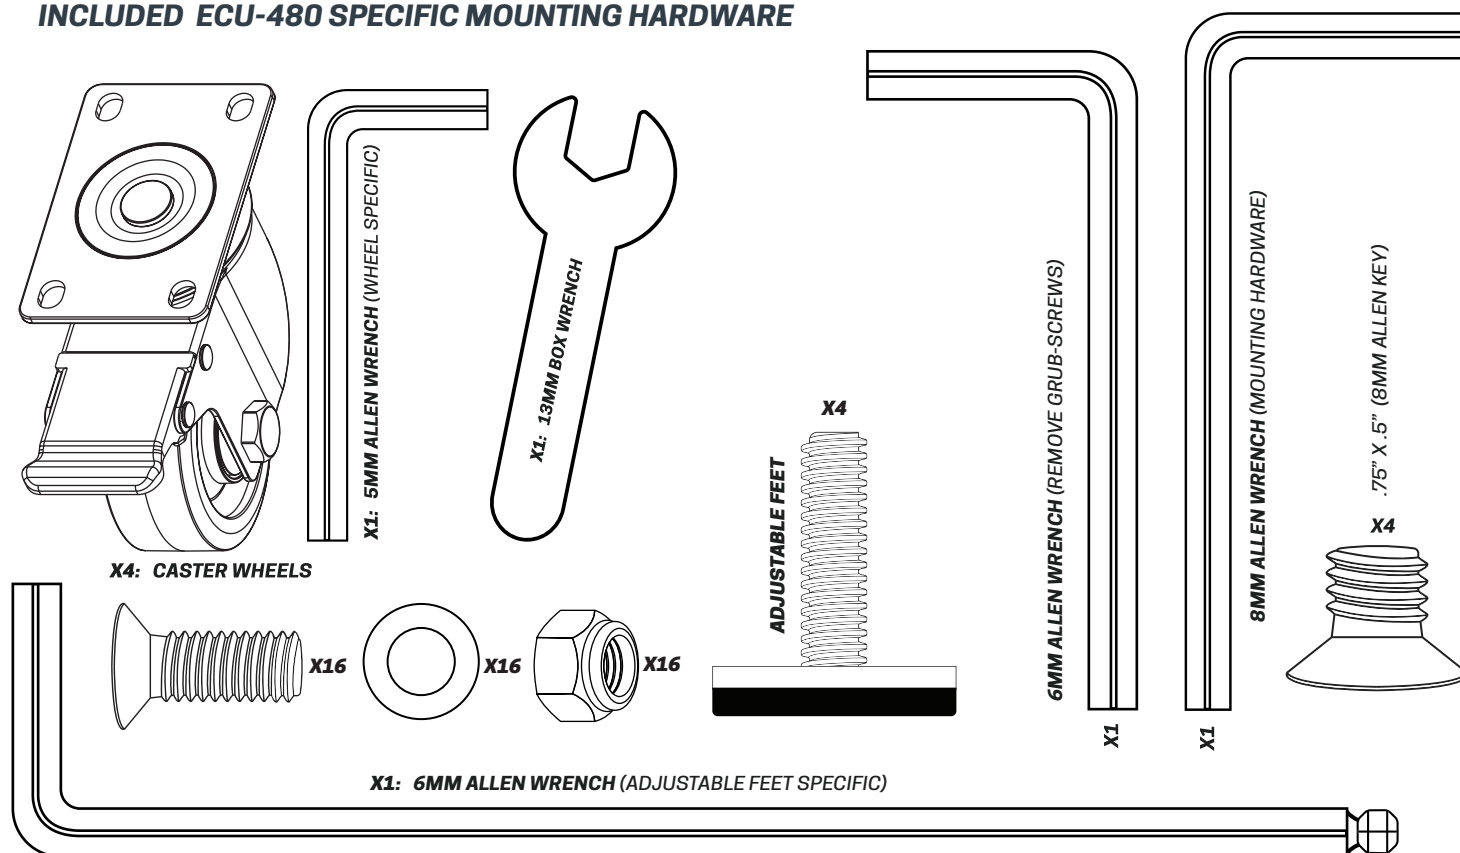


FIGURE 1

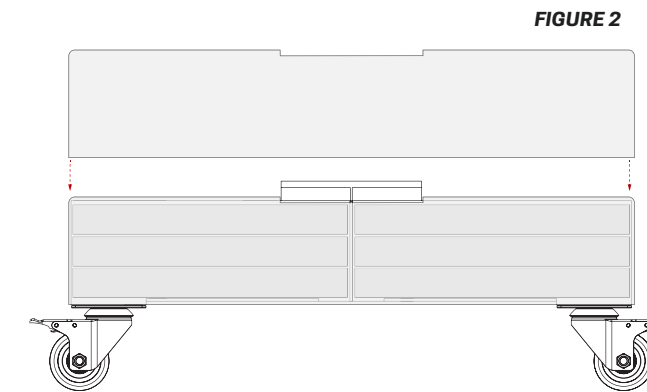


FIGURE 2

