



ECLIPSE®

40Gx3 ROUND GALVANIZED PLATE STACK

Your Eclipse® Cantilever comes with the Spigot already inserted in the mast of your umbrella. Once you have properly installed to your selected mount/base option, remove the Spigot from your umbrella and you can begin to mount your Spigot to the G-Plate Stack, and then the umbrella (see **FIGURE 4**).



GRUB-SCREWS ARE IN PLACE TO PROTECT THE THREADED HOLES ON BASES DURING SHIPPING AND STORAGE. THEY MUST BE REMOVED AND DISCARDED BEFORE THE INSTALLATION OF ANY UMBRELLA.

- Once your 40G-Plate is unpacked, move into the desired location you will be mounting the umbrella. Once in place immediately remove and discard ALL Grub-Screws from the G-Plate (**FIGURE 1**).
- Locate your pair of Guide Pins and hand tighten into a pair of parallel threaded holes into the 40G-Plate you have set into place and is designated as your bottom plate (**FIGURE 1-A**) .
- Begin to unpack your second 40G stacking plate. Using a half of the white packing foam, place on the edge of the bottom plate already in place and set down your plate (**FIGURE 2A**). This will help prevent any pinching of your fingers or injury.
- TWO PERSON JOB:** Lift your second 40G-Plate (**FIGURE 2**), and slowly stack the plate with the “naked” non-threaded holes over the Guide Pins. If the plate does not pass through and set down, please check to be sure you have rotated the plate to line up the “naked” holes with the Guide Pins.
- Once the second plate is set, remove the piece of foam used to protect your fingers and repeat steps 3 & 4 for the third 40G-Plate.
- Once all three plates are stacked, and over the Guide Pins, retrieve and remove the Spigot from the mast of your Eclipse® umbrella. Place the Spigot over the Guide Pins (**FIGURE 3**) then remove the Guide Pins and you will have a clear visible path to the bottom plate’s threaded holes.
- With your Spigot in place on G-Plate stack lined up to the outer four bolts, use the supplied hardware that is packed with your umbrella and bolt the Spigot onto the G-Plate stack threading down into the bottom plate (**FIGURE 4**). Once your Spigot is secure to the G-Plate stack, begin to lift the Eclipse® onto the Spigot until you hear an audible “click” indicating your umbrella is secure.

INCLUDED G-PLATE TRIPLE STACK SPECIFIC MOUNTING HARDWARE

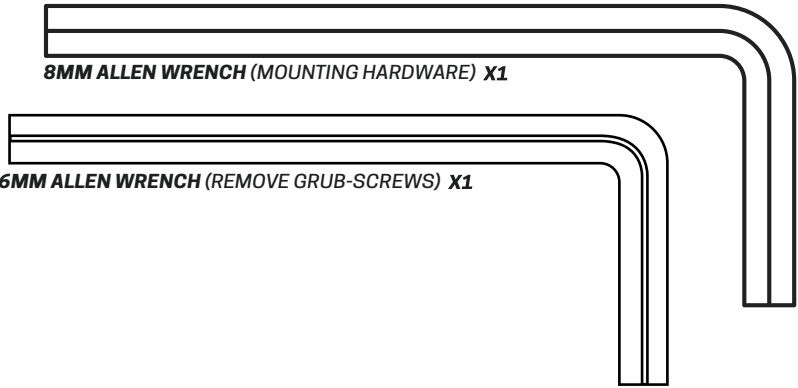
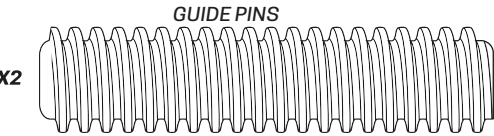
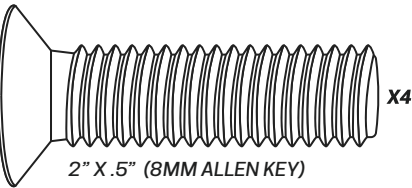


FIGURE 1


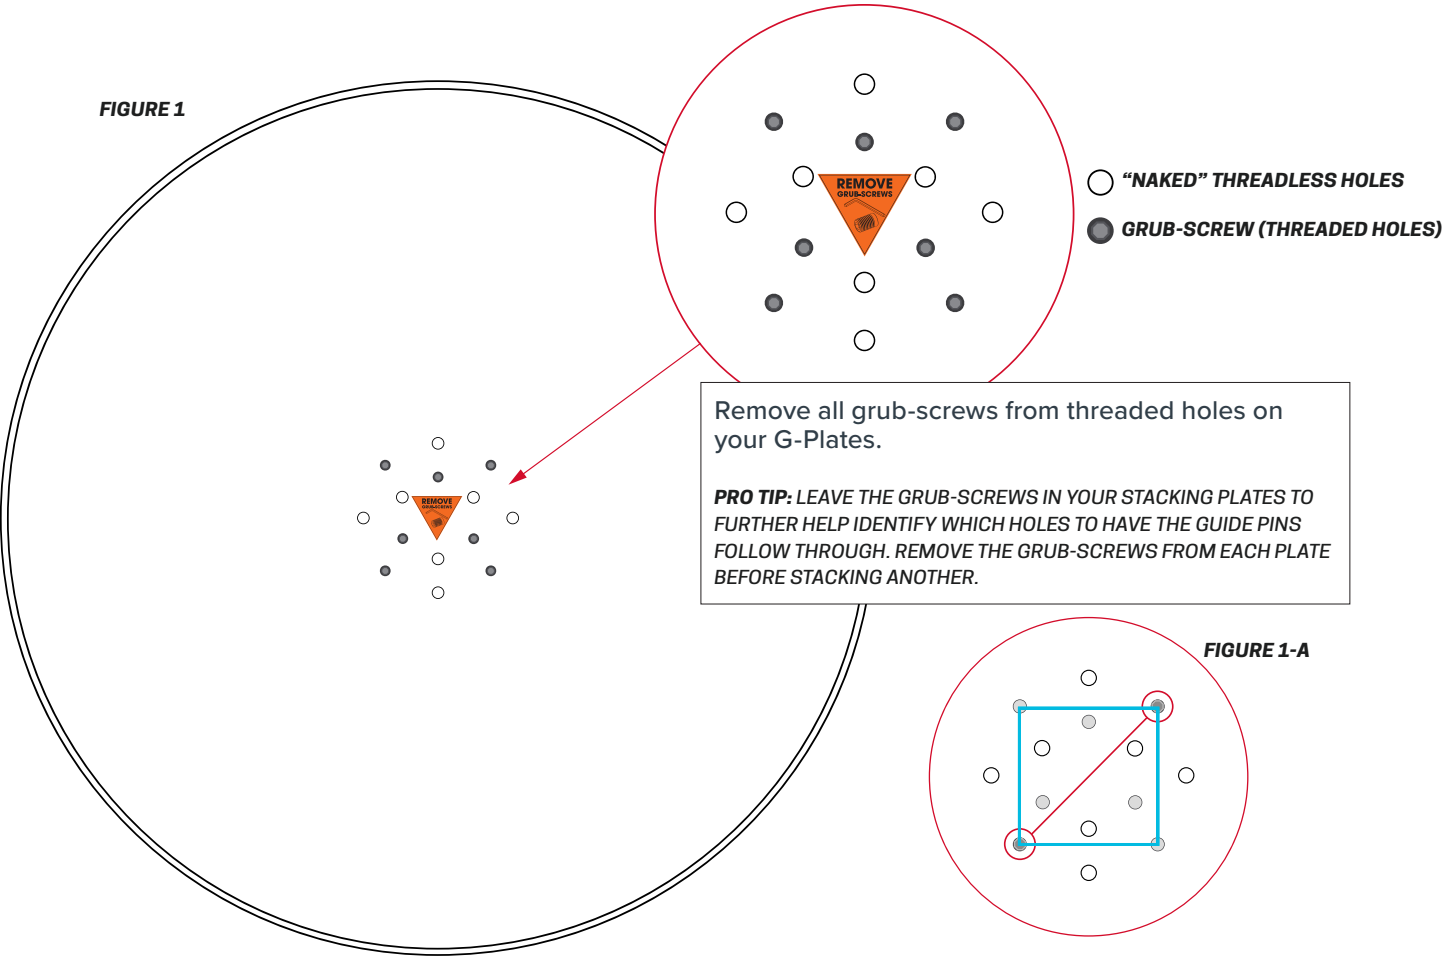


FIGURE 2

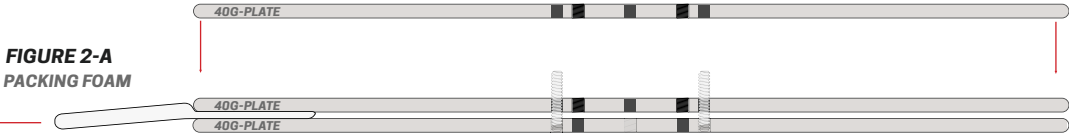

Once your spigot is in place and on the Guide Pins, begin to remove them from the stack.

This will give a clear visible path to the bottom plate’s threaded holes.

FIGURE 3



FIGURE 4

After Guide Pins are removed, thread the supplied hardware to the bottom plate.