

ECLIPSE®

NGU-550 HD BASE



GRUB-SCREWS ARE IN PLACE TO PROTECT THE THREADED HOLES ON BASES DURING SHIPPING AND STORAGE. THEY MUST BE REMOVED AND DISCARDED BEFORE THE INSTALLATION OF ANY UMBRELLA.

Your Eclipse® Cantilever comes with the Spigot already inserted in the mast of your umbrella. Once your NGU-550 is set in place, remove the Spigot from your umbrella and you can begin to mount your Spigot to the plate stack, and then the umbrella. (see **FIGURE 2**).

DISCLAIMER: The NGU-550 ships fully weighted (unless specified), and is advised not to tilt, lean or shimmy into position. The materials used on the internal box frame are extremely durable, however 550lbs. concentrated onto a corner of the aluminum lid could deform it aesthetically. We suggest using a hand-truck, forklift.


If you have received your NGU-550 empty, please be sure to properly weight the base with a recommended total of 400 lbs. (100 lbs. per quadrant) using concrete pavers. This must be done prior to mounting your Eclipse Cantilever® Umbrella.

TOOLS & MATERIALS NEEDED

- A trusted level
- Hand truck or Dollies to move the NGU-550 into your desired position more easily.

1. Once you have decided on the location of the Eclipse umbrella, make sure you have an area of at least 48”-50” in diameter for the base to rest, then place NGU-550 into position.
2. Bring your attention to the Universal Plate bolted to the center of NGU-550 (**FIGURE 1**). **DO NOT** remove the four bolts holding this plate down (**FIGURE 1A**). It does not need to be removed to mount your umbrella. You will need to remove the grub-screws in the Universal Deck Plate mounted to the NGU-550 (**SEE RED PATTERN IN FIGURE 2**).
3. Once the grub-screws are removed from the correct pattern (**FIGURE 2**), you can prepare to mount your Spigot.
4. Retrieve the Spigot from your umbrella. It will already be inserted into the mast. Place the Spigot on the Universal Plate (**FIGURE 3**) on the NGU-550 lining up to the proper pattern (**FIGURE 2**). Using the supplied hardware that is packed with your umbrella, bolt the Spigot onto the Universal Plate (**FIGURE 3A**)
5. Begin to lift the Eclipse® onto the Spigot until you hear an audible “click” indicating your umbrella is secure.

INCLUDED NGU-550 SPECIFIC MOUNTING HARDWARE

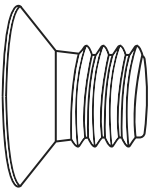

X4

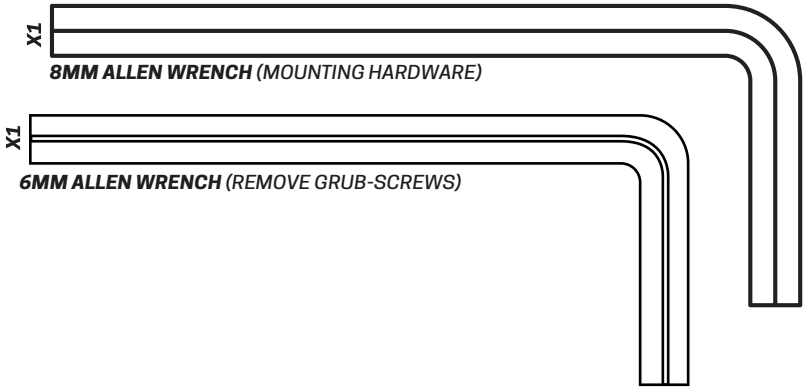


FIGURE 1

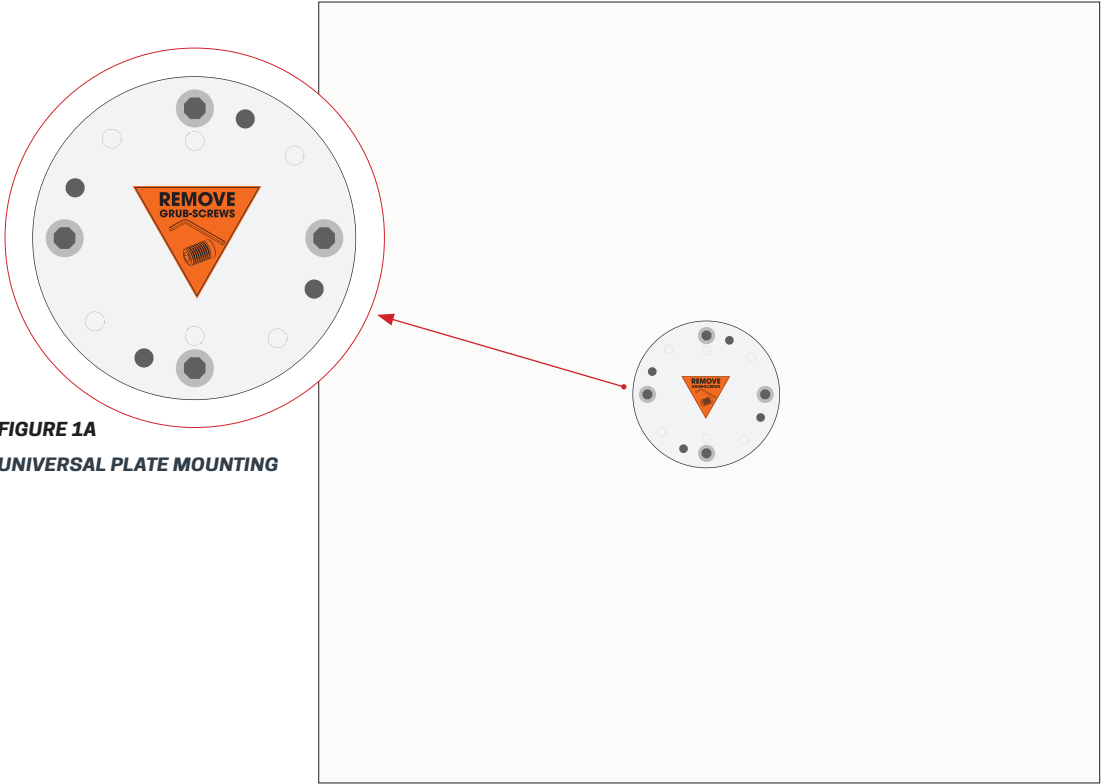


FIGURE 2

FIGURE 3A

FIGURE 3

